

Tacticam I.C.U. 2.0 HD720P Stabilizer


Effects:

- Stabilization of the image
- Less saturation of the color
- Frame per second seems better as well. The flow of image is smoother.
- Shorter distance focal (Image not blurred when we are close
- Image with the stabilizer is at a shorter distance from the lens Note: Does not apply to I.C.U. 1.0.

Installation Guide

Step-by-Step guide to install our software update for I.C.U. 2.0:

1. Please visit our website: www.planbeta.net/download

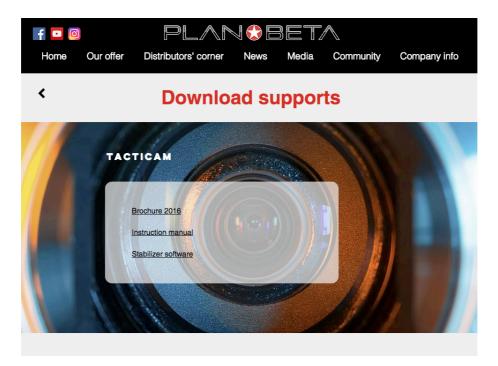




2. Click Download




3. Click Download on the Dropbox link

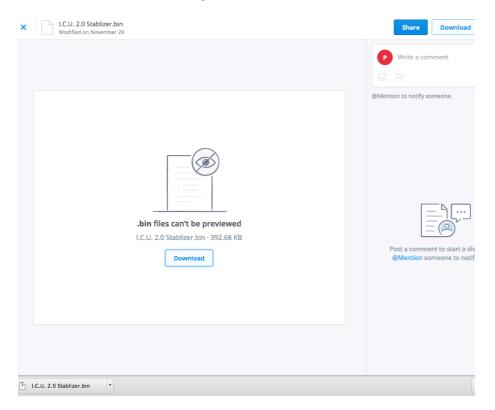



4. Move the Stabilizer file onto the SD card

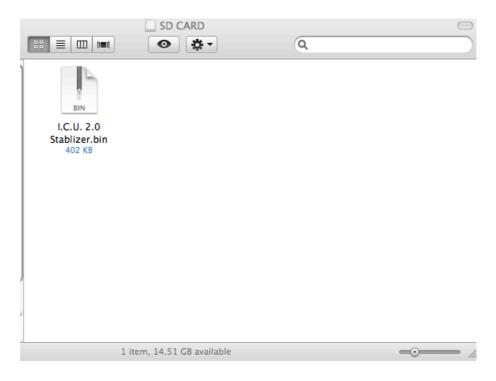

5. Install the SD Card into the ICU 2.0 and turn it on.
The Green light will blink for 10sec then the ICU2.0 will automatically switch off, when the ICU2.0 has been switched off, remove the SD card and connect the SD card to the computer.





6. Remove the Stabilizer from the SD Card



7. Re-insert the SD card into the ICU2.0 and enjoy the updated software.



Tacticam Stabilizer Benefits - Footages example 1/2

1. **Image Stabilization – Even in movement, your image is clean** Get a better image for you snapshot

WITH STABILIZATION

WITHOUT STABILIZATION



2. Low Color Saturation – Always Better with a good and real light Avoid color saturation with the stabilizer.

WITH STABILIZATION

WITHOUT STABILIZATION





Tacticam Stabilizer Benefits - Footages example 2/2

3. Focal Length – Short problem is not a problem anymore to get clear look. Get a sharp image even few meters away from the target.

WITH STABILIZATION

WITHOUT STABILIZATION



4. Zoom Effect – Closer look is always better for shooter Get a closer view with stabilizer at equal distance from the target.

WITH STABILIZATION

WITHOUT STABILIZATION

